



GENUINE PARTS

INSTALLATION INSTRUCTIONS



DESCRIPTION: Chrome Rear Bumper Protector

APPLICATION: Rogue


PART NUMBER: T99B1 6RR1A

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Rear Bumper Protector
B	2	Spacer Block
C	1	Adhesion Promoter Sponge Applicator Packet
D	1	Adhesion Promoter Application Template
E	1	Installation Instruction Replacement Template

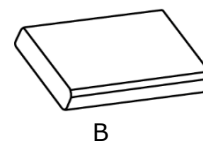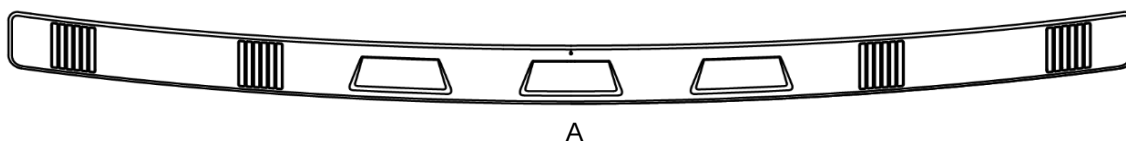

C

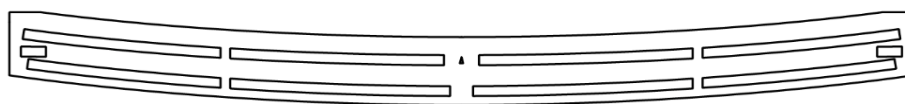

D



E

TOOLS REQUIRED:

- Clean Lint-Free Cloth
- Disposable Gloves
- 90% or Greater Isopropyl Alcohol Solution
- Safety Glasses
- Masking Tape


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer installation recommended.
- Install rear bumper protector only when part and vehicle temperature are both between 18°C - 40°C (64.4°F - 104°F).
- To allow time for adhesive to cure, keep vehicle temperature between 18°C - 40°C (64.4°F - 104°F) for minimum of 2 hours after installation is complete.
- Do not wash vehicle for at least 72 hours after installation is complete.
- Avoid exposing vehicle to rain, sleet, snow, and other forms of precipitation for at least 72 hours after installation is complete.

CRITICAL STEP

- Adhesion promoter **MUST** be applied to surfaces that bumper protector's tape will bond to; otherwise, poor adhesion will result.


INSTALLATION PROCEDURE:

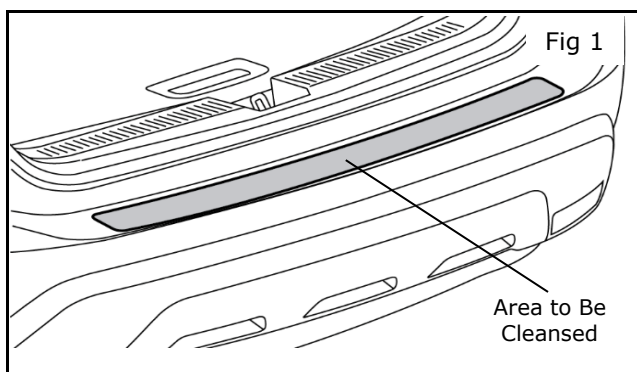


- 1) Open backdoor; then, clean bumper protector mounting area (shaded area).
 - a) Wash with soap and water. Allow time to dry.
 - b) Cleanse with 90% or greater isopropyl alcohol solution. Allow time to dry.

NOTE:

Failure to clean mounting surface thoroughly can result in bumper protector adhering poorly.

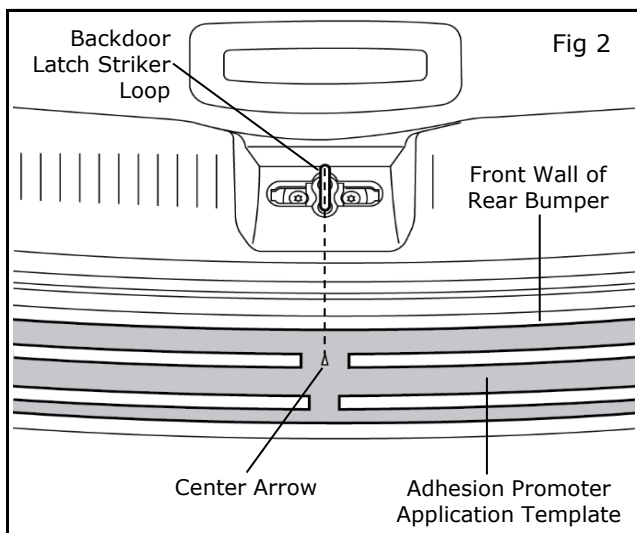


- 2) Position adhesion promoter application template on rear bumper.
 - a) Align center arrow on template to backdoor latch striker loop.
 - b) Butt front edge of template up against front wall of rear bumper.

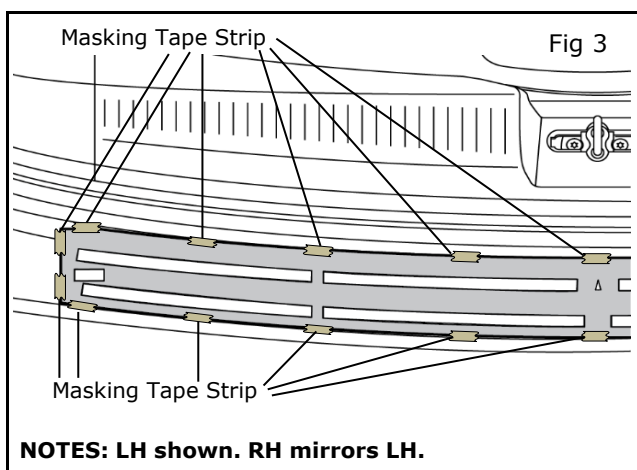

- 3) Secure template to rear bumper with masking tape as shown.

INSTALLATION PROCEDURE:

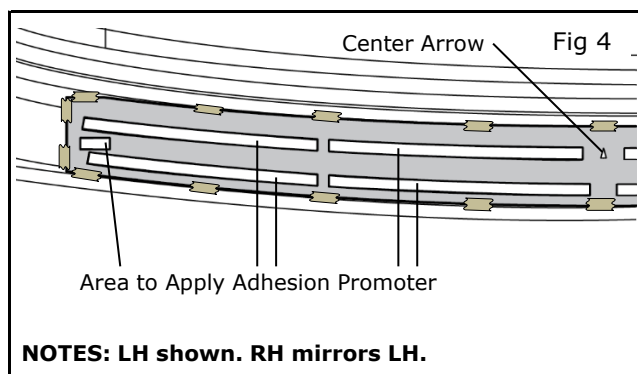

- 4) With exception of center arrow, apply thin coating of adhesion promoter to rear bumper surfaces exposed by template's cutouts. Allow 90 seconds for adhesion promoter to dry.

⚠ CAUTION

Put on disposable gloves and safety glasses prior to handling adhesion promoter.

NOTES:

- Adhesion promoter **MUST** be applied to surfaces that bumper protector's tape will bond to; otherwise, poor adhesion will result.
- Do **NOT** put adhesion promoter directly on double-sided tape's adhesive.
- Adhere bumper protector to rear bumper no sooner than 90 seconds after application of adhesion promoter and no later than 1 hour after application of adhesion promoter.

- 5) Remove and discard template.

- 6) Dry fit bumper protector.


NOTE:

Do not remove tape liners during dry fit of bumper protector.


- a) Align center arrow on bumper protector to backdoor latch striker loop.

NOTE:

Do not align center arrow on bumper protector to seams on backdoor's weatherstrip.

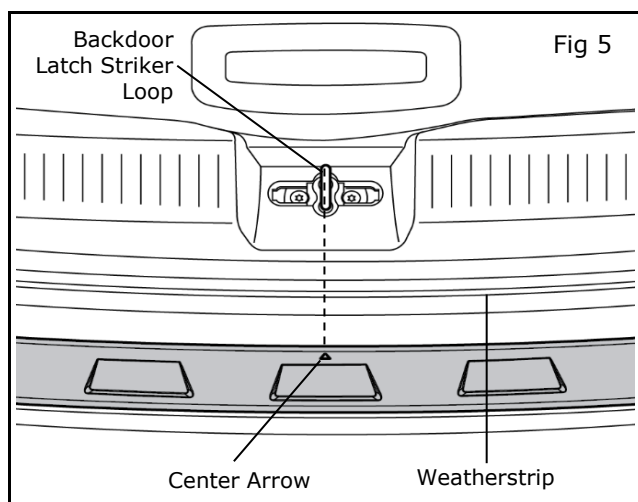


INSTALLATION PROCEDURE:

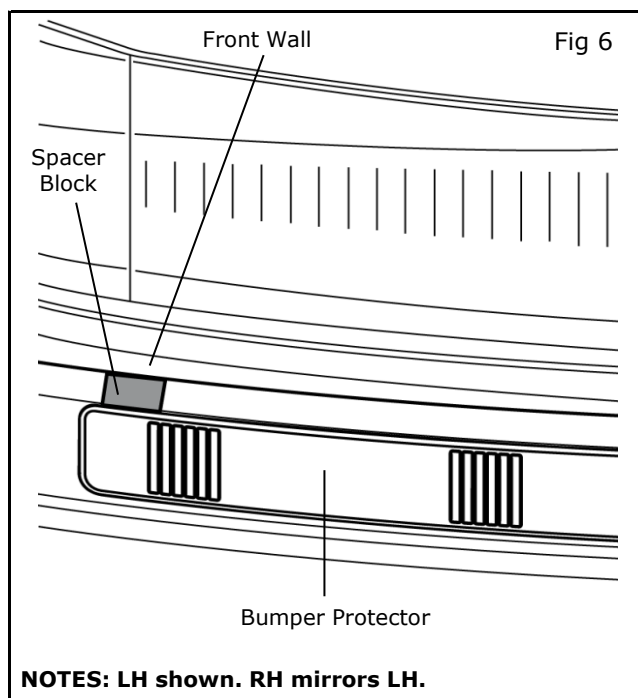


- b) On left-hand side, position spacer block between front wall of rear bumper and front edge of bumper protector as shown. Repeat on right-hand side.

NOTE:

Spacer blocks must have snug fit between front wall of rear bumper and front edge of bumper protector.

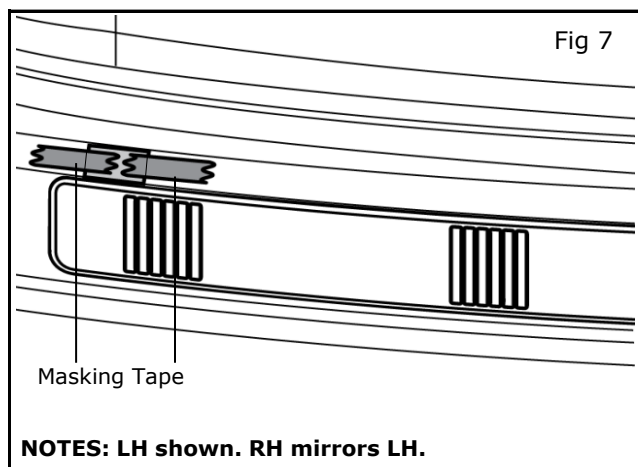


- c) Secure spacer blocks to rear bumper with masking tape.

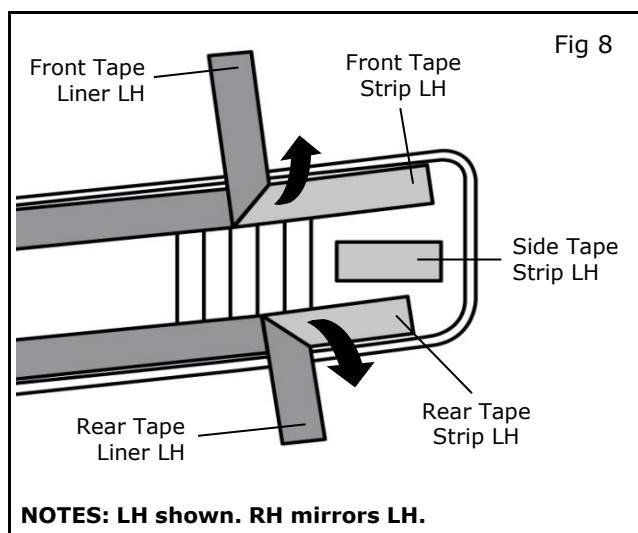

- 7) Prepare tape.
- Remove bumper protector.
 - Peel back front tape liners about 38 mm (1½ inches), and fold them as shown.
 - Peel back rear tape liners about 25 mm (1 inch), and fold them as shown.
 - Remove tape liners from side tape strips.


INSTALLATION PROCEDURE:

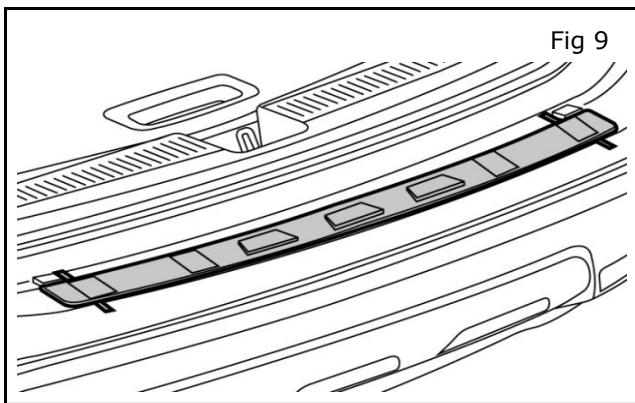


- 8) Realign bumper protector to backdoor latch striker loop and spacer blocks; then, apply gentle pressure to lightly tack both ends.

NOTE:


Do not apply firm pressure.

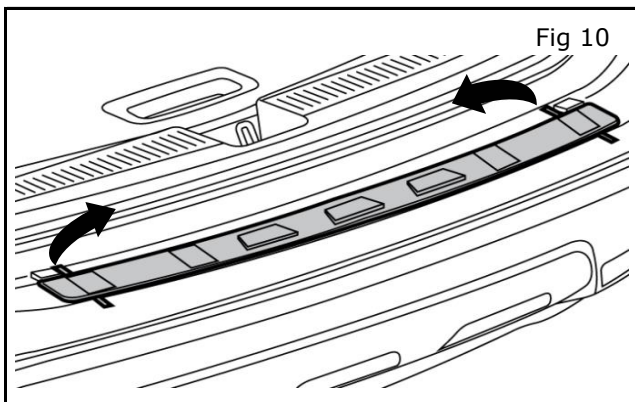

- 9) Remove front tape liners by slowly pulling inboard towards center.

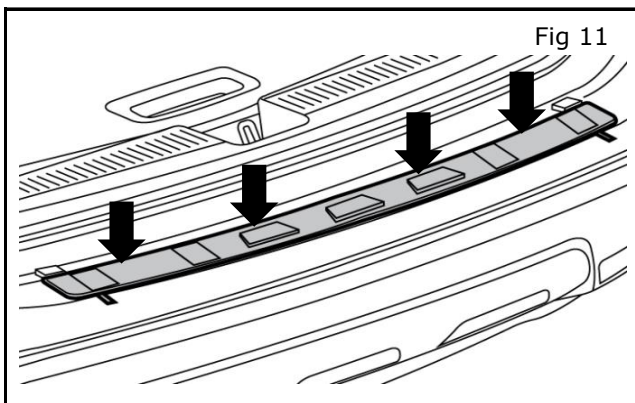


- 10) Using clean lint-free cloth, apply firm pressure along path of front tape strips. Start from center and work outboard in one direction. Repeat in opposite direction.

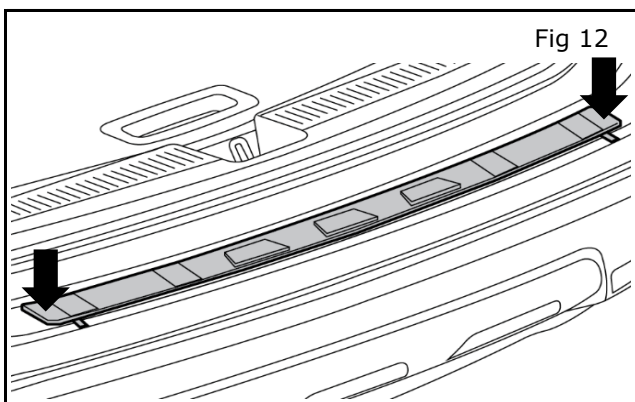


- 11) Remove spacer blocks.
- 12) Using clean lint-free cloth, apply firm pressure along path of each side tape strip.


INSTALLATION PROCEDURE:

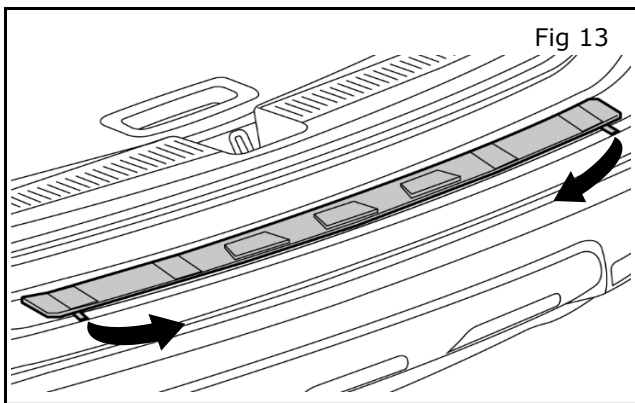

- 13) Remove rear tape liners by slowly pulling inboard towards center.

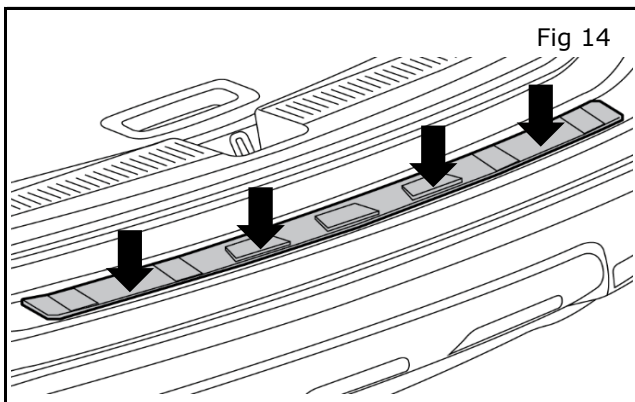

- 14) Using clean lint-free cloth, apply firm pressure along path of rear tape strips. Start from center and work outboard in one direction. Repeat in opposite direction.

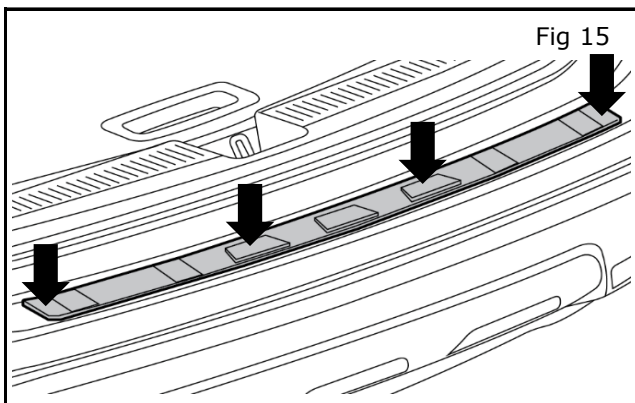

- 15) To ensure adequate adhesion, reapply firm pressure across entire bumper protector.

NOTE:

Failure to apply enough pressure to all tape lengths may cause bumper protector to adhere poorly.

- 16) Remove and discard protective film.